

1350 GRAIN CART START-UP INSTRUCTIONS 1-800-543-3626

1. Engage hydraulic lever for pendant control. Unfold auger.
2. Engage PTO at low RPM. Increase PTO to desired speed.
3. Open interior door 1/3 - 1/2 till grain starts to flow from spout then adjust for desired grain flow.
4. Engage hydraulic lever for horizontal drag auger.

WHEN FINISHED FILLING

1. Disengage Hydraulic lever for drag auger.
2. Close inner door and decrease the tractor RPM.
3. When grain stops flowing disengage PTO.
4. Fold auger into transport and disengage hydraulic lever for pendant control.

**** NOTE: DO NOT FOLD OR UNFOLD AUGER WHILE CART IS IN TRANSPORT.**